




GUIDE

Create tiled floors with confidence using our 15 step guide



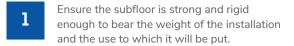



Ensure the surface is clean and free of debris. If in any doubt about the suitability of the subfloor, please contact our helpline.




Cut the sections of mat to size and put to one side.





Using a suitable adhesive (in most cases this will be a single part flexible powder tile adhesive), prime the floor if required by the adhesive manufacturer's instructions.

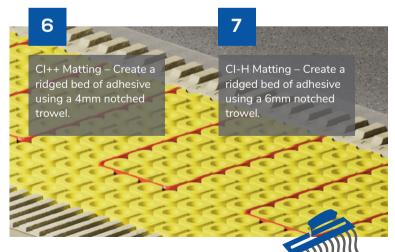

*For more information on Durabase systems, please visit our website – www.cimatting.co.uk or contact our helpline on 01924 360110.



Lay the heating cables according to your individual requirements. Follow the manufacturer's instructions for installation and connection.

14

Test cables in line with manufacturer's guidance.



If being used in a wet area or in a tanking system, seal all seams with our accessory jointing tape and use a suitable waterproof adhesive.



Cl++ is now ready to accept tiles. Ensure good tiling practice is followed avoiding any voids in the adhesive bedding.

CI-H is now ready to accept tiles. Ensure good tiling practise is followed avoiding any voids in the adhesive bedding.

CI++/CI-H – We advise using a flexible grout with both mats, with a minimum width of 3mm.



15

VISIT OUR WEBSITES TO VIEW ALL OUR PRODUCTS



www.dural.co.uk
www.cimatting.co.uk
www.colouredmovementjoints.co.uk
www.alternativefinishes.co.uk
www.resinprofiles.co.uk



DURAL (UK) LTD

01924 360 110 ukinfo@dural.com dural.co.uk

Unit 6a, Wakefield Business Centre, Denby Dale Road Wakefield, West Yorkshire, WF2 7AZ











